

# SAMSUNG U365

## USERS MANUAL

Front



Sides



Open



### Key Functions - Front

- 1. Camera Lens:** The lens of the built-in camera.
- 2. Front Screen:** Shows signal and battery strength, time, day, and date, plus calls or message notifications.

### Key Functions - Sides

- 1. Strap Attachment:** Attach an optional strap (not included).
- 2. 2.5 mm Headset Jack:** Plug in an optional headset for music, or for safe, convenient conversations.
- 3. Camera Key:** From the Home screen, press to activate the Camera. When using Camera, press to take a photo.
- 4. Speakerphone Key:** With the flip open, press and hold to activate the Speakerphone. With the flip closed, press and hold to activate Voice Commands, or press 4 times to initiate a Fake Call.
- 5. Cover Release Latch:** Pull here with your finger to remove the battery cover.
- 6. Charging/Accessory Port:** Plug in charging accessories, and connect compatible accessory cables.
- 7. Volume Key:** Press to adjust Volume. Press Down to silence an incoming call ringtone. From the Home screen, press and hold Down to switch between Sound Off and the previous Volume level.

### Key Functions - Open

- 1. Earpiece:** Allows you to hear the caller.
- 2. Main Screen:** Displays phone features.
- 3. Voicemail Key:** Press to access voicemail.
- 4. Right Soft Key:** Press to select the command at the lower right area of the display screen.
- 5. Messaging Key:** Press to access the Messaging menu.
- 6. End/Power Key:** Press to end a call. Press and hold to turn the phone On or Off.
- 7. Vibrate Mode Key:** Press and hold to activate Vibrate Mode.
- 8. Voice Commands Key:** Press and hold for Voice Commands.
- 9. Clear Key:** Press to delete numbers or characters from the display, or to return to the previous item or screen.
- 10. Send Key:** Press to place or receive a call. From the Home screen, press once to access the All Calls log.
- 11. In Case of Emergency (ICE) Key:** Press to access stored emergency numbers and information.
- 12. Left Soft Key:** Press to select the command at the lower left area of the display screen.
- 13. Directional and OK Keys:** Press left, right, up and down to scroll lists or screens, or to select a highlighted item.

### Getting started

#### Installing the battery

- Hold the phone firmly and locate the Cover Release Latch.
- Firmly “pop” the cover off the phone.
- Insert the battery into the phone, aligning the gold contacts on the battery with the gold contacts in the phone.
- Align the cover and press it into place, making sure it snaps securely.



#### Removing the battery

- Hold the phone firmly and locate the Cover Release Latch.
- Firmly “pop” the cover off the phone.
- Lift the battery from the bottom end (see arrow 1) and remove.
- Align the cover and press it into place, making sure it snaps securely.



**CONTINUED ON BACK**

## Charging the battery

1. Insert the charger cable into the Charging/Accessory port.
2. Plug the charging head into a standard AC power outlet.
3. When charging is complete, unplug the charging head from the power outlet and remove the cable from the phone.



## Turning Your Phone On/Off

### Turning on/off your phone:

- Press and hold the **END/Power Key** to turn the phone on or off.



## Adjusting Backlight

1. From the Home screen, press the **Left Soft Key** **Menu** > **Settings** > **Display** > **Backlight**.
2. Choose **Display** to make selections for the LCD display's backlight:
  - **Duration:** Set the length of time the backlight is illuminated, from **7 seconds**, **15 seconds**, **30 seconds** or **Always On**.
  - **Brightness:** Press the **Directional Key Left** or **Right** to adjust the brightness.
3. Choose **Keypad** to make selections for the keypad backlight. choose from **7 Seconds**, **15 Seconds**, **30 Seconds**, **Always On** or **Always Off**.
4. Press **OK SET** to save your settings.

## Adjusting Volume

Use the **Volume Key** to adjust volume:

- From the Home screen, press the **Volume Key** to set Master Volume.
- From the Home screen, press and hold the **Volume Key** down to activate Sounds Off/Normal mode.
- During calls, press the **Volume Key** to adjust voice volume.
- During music playback, press the **Volume Key** to adjust audio volume.
- Press the **Volume Key** to mute the ringtone of an incoming call.
- If Fake Call is enabled, press the **Volume Key** down 4 times with the flip closed to initiate a Fake Call.

## Turning Bluetooth On/Off

1. From the Home screen, press the **Left Soft Key** **Menu** > **Settings** > **Bluetooth**.
2. Press the **Left Soft Key** **Set On** or **Set Off**.

## Accessing Internet

- From the Home screen, press the **Directional Key Left**.  
– or –  
From the Home screen, press the **Left Soft Key** > **Menu** > **Mobile Web**.

## Making Calls

Your phone offers multiple ways to make calls:

- Enter the phone number or speed dial number, then press the **SEND** **Send Key**.
- Call a contact from Contacts.
- Return a call, or call a recent caller via Recent Calls.
- Voice dial using Voice Commands.

## Answering Calls

You can answer calls with either the flip open or closed.

- With the flip closed, open to answer automatically.
- With the flip open, press the **SEND** **Send Key**.

## Answering Call-Waiting Calls

When you receive a call while on a call:

- Press **SEND** to place the first call on hold and answer the new call.
- To return to the original call, press **SEND** again.

## Sending Calls to Voicemail

Ignoring a call sends the caller directly to voicemail, and stops the incoming call ringtone. Use one of these methods to ignore an incoming call:

- Press the **Left Soft Key** **Quiet** to silence the ringer.
- Press **OK TXT** to send the call to voicemail, and choose a pre-entered phrase to send as a text message, or create a new text message to send to the caller.
- Press the **Right Soft Key** **Ignore** to send the call to voicemail.

## Voicemail

### Setting Up Voicemail:

1. From the Home screen, press the **Messaging Key** > **Voicemail**.
2. On the **Voicemail** screen, view the number of new messages. Press **OK Call** to dial voicemail to check messages, or press the **Left Soft Key** **Clear** to clear the voicemail counter.

## Adding a New Contact

1. From the Home screen, press the **Right Soft Key** **Contacts**.
2. Press the **Right Soft Key** **Options** > **New Contact**.
3. Use the keypad to enter a name for the contact in the **Name:** field.
4. Use the **Directional Key** to highlight **Mobile 1**, **Home**, **Business**, **Mobile 2**, or **Fax** and enter at least one telephone number.
5. Continue using the **Directional Key** to move to fields to add additional information, if desired.
6. When you're finished entering information, press **OK Save** to save the contact.

## Text Messaging

1. From the Home screen, press the **Messaging Key** > **New Message** > **Text Message**.
2. At the **New Text Msg** screen, enter recipients in the **To:** fields:
  - Use the keypad to enter a recipient's phone number, contact name, or Email address. As you enter characters, matching contacts display in a list. Use the **Directional Key** to highlight a contact, then press **Ok**.
  - Press the **Right Soft Key** **Add** to select recipients:
    - **From Contacts:** Choose contacts from the Contacts List.
    - **Recent Calls:** Choose numbers from Recent Calls.
    - **Favorites:** Choose contacts you have marked as Favorites.
    - **Groups:** Choose a contacts Group.
    - **To Contacts:** If a recipient is not saved to contacts, you can save it as a new contact or update an existing one.
3. Use the **Directional Key** to move to the **Text:** field to compose your message.
4. While entering text, press the **Right Soft Key** **Options** for these options:
  - **Insert Quick Text**
  - **Save As Draft**
  - **Copy**
  - **Paste**
  - **Add**
  - **Format Text**
  - **Priority Level**
  - **Callback #**
  - **Cancel Message**
5. Press **OK Send**, or **SEND** to send the message.

## Taking Pictures

1. From the Home screen, press the **Camera Key** on the right side of the phone.  
– or –  
From the Home screen, press the **Left Soft Key** > **Menu** > **Media Center** > **Pictures** > **Take Picture**.
2. Set **Options**, if desired.
3. Using the display screen as a viewfinder, compose your picture by aiming the lens at your subject.
4. Press the **Camera Key** or **OK Take** to take the picture.
5. After taking a photo, use the soft keys for these options:
  - Press the **Right Soft Key** **Erase** to delete the new photo.
  - Press **OK Send** to resize the new photo and attach it to a new picture message.
  - Press the **Left Soft Key** **Save** to save the picture to My Pictures.